




**Column Mount Bracket**  
**Part# P-00700-CB**

**SPECIFICATIONS**  
**PAGE 1 OF 1**

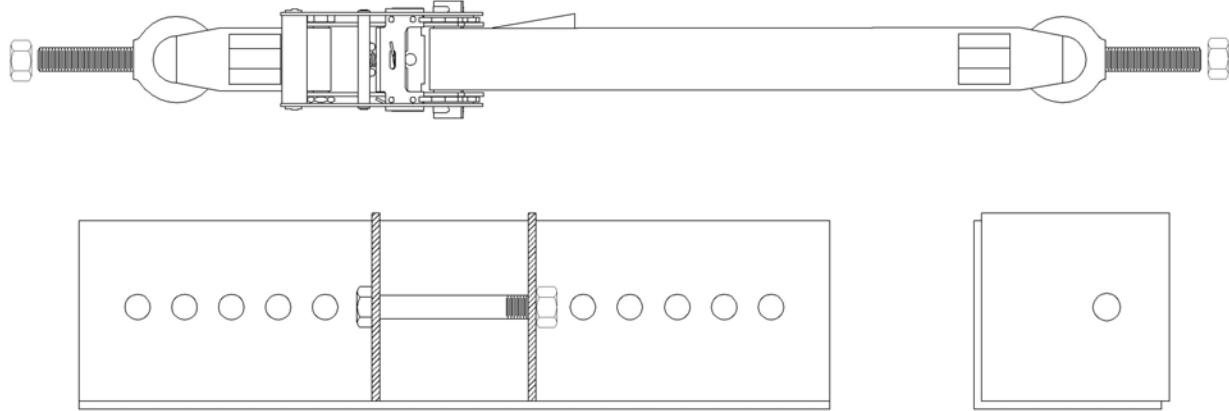

**DESCRIPTION**

The column mount bracket is a non-destructive clamp on mounting bracket for the P-00700 perimeter arm. It works on steel columns up to 18" across.

**INSTRUCTIONS**

1. Be sure the location you would like to install the anchorage is capable of supporting the maximum loads that may be applied to this anchor.
2. Place the bracket centered on the column, facing the slab edge.
3. Insert the two eye bolts for the securing strap in the holes closest the edge of the beam and tighten nuts.
4. Pull excess strapping through the ratchet buckle and then cycle the handle until the strap is tight. Make sure there are at least three wraps of webbing around the cylinder.

**Warning:** Be sure the ratchet buckle is flat against the side of the column, and not spanning a corner.

**GENERAL SPECIFICATIONS**

Item	Description
Bracket	ASTM A36 Structural Angle, Powder Coated
Mounting Bolt	3/4" Grade 5, Zinc Plated
Eye Bolt	3/4" Forged, Powder Coated
Buckle	Heat Treated Carbon Steel, Zinc Plated
Webbing	2" Polyester

**Technical References:**

- (1) Meets OSHA 1926 Subpart M for fall arrest netting when used as part of a complete system.
- (2) Meets ANSI A 10.11 drop test requirements for fall arrest netting when used as part of a complete system.
- (3) Break Strength—N/A